



310 COLLECTION CABINET PULL


- 4" 310704
- 6" 310706
- 8" 310708
- 12" 310712

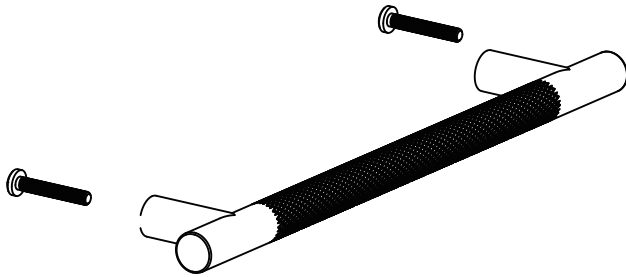

Tools required for installation



Level

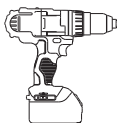

Drill




Pencil



Screwdriver




Hammer

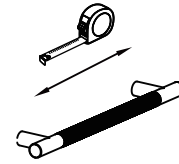


Step 1

Measure the Center to Center distance of pull with tape.

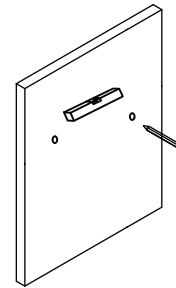


Step 2

Mark the holes position with pencil, make sure the holes are level.

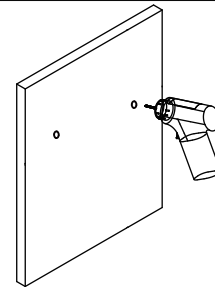

Step 3

Drill holes on the board.

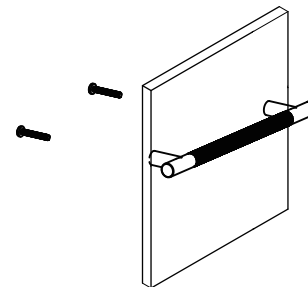

Step 4

Fix the screws onto pull and tighten it.