


WIRE BASKETS

SHAMPOO BASKET


828009

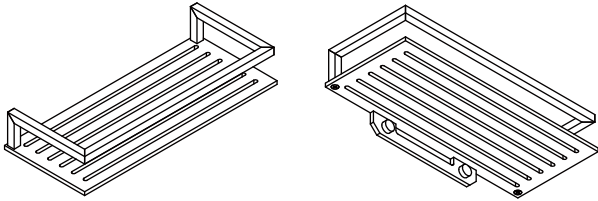

Tools required for installation




Level



Drill




Pencil

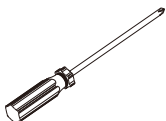

Screwdriver




Hammer

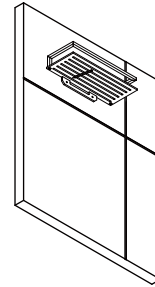


Step 1

Position the shower shelf against the wall and mark the holes with pencil.

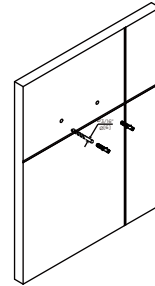


Step 2

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

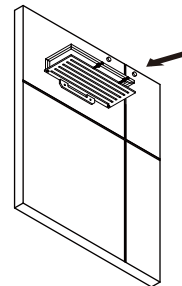

Step 3

Install screws through the backing holes, and tighten the screws into the wall, ensure the product is level.

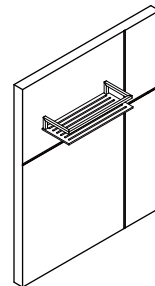

Step 4

Screw the end caps onto the screws head.