


SOFIA COLLECTION


TOWEL BARS 167180

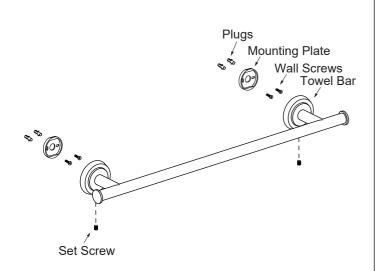

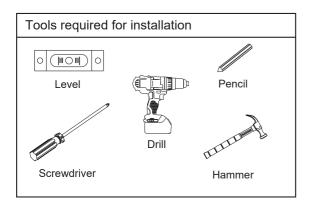


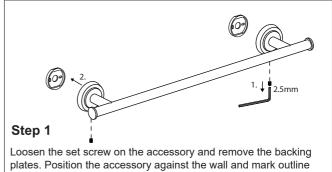


with pencil.

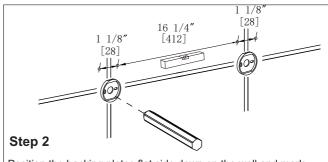

Position the backing plates flat side down on the wall and mark holes with pencil.

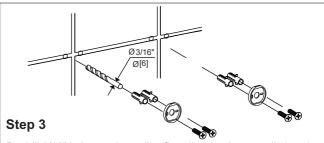

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall. Position backing plates flat side down over the plugs and install screws.

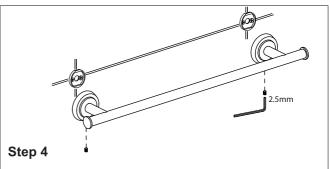

Slide the accessory onto the backing plates and tighten the set screws using Allen key provided.