

KARTNERS


WINDSOR COLLECTION

DOUBLE SDH KNOB 2247502

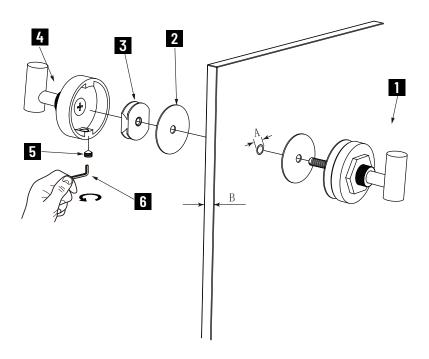


- 1. Knob-A x 1
- 2. Clear Gasket x 2
- 3. Fixing Bracket x 1
- 4.Knob-B x 1
- 5. Set Screw M5 x 1
- 6. Allen Key 2.5mm x 1

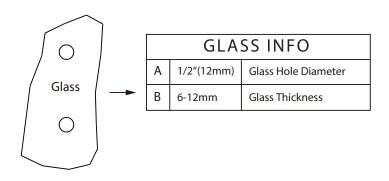


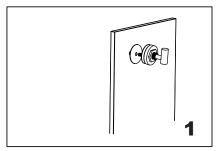


Install the knob A (bolt) through the glass hole, make sure the rubber gaskets are between handle&glass.

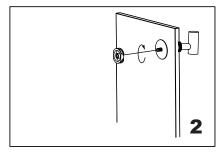

Screw in the fixing bracket into the knob A bolt.

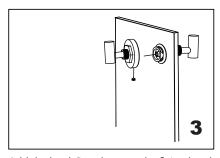

Add the hook B end cap on the fixing bracket,make sure the set screw hole in the bottom.

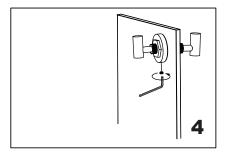

Fix the set screw on the end cap, tighten it to avoid loose from fixing brackets.